

## Button Operation


**MODE LOCK**  
**Dispensing Period**  
 Press To Set Dispensing Period  
 1,2,3...12 month (12 Modes)

**POWER**  
**Power ON/OFF**  
 Press to Power unit On or Off

**TEST**  
**Grease Capacity**  
 Press to select 60/125/250ml

**TEST Mode**  
**ON** : Press for 2 second  
**OFF** : Short press of button  
 (will stop after completion of ongoing cycle)

**POWER + MODE LOCK**  
**Vibration Detection Mode**  
 (Refer to the Installation Guideline Step 7)  
 Hold the Power button and then  
 press the Mode button

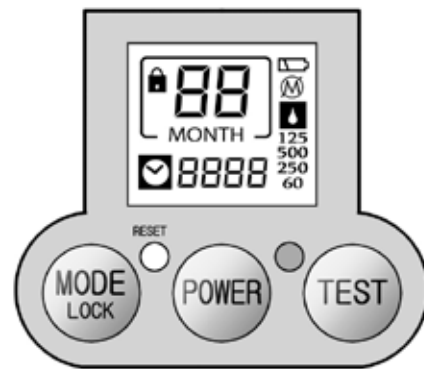

**RESET**  
 Reset to default setting when the  
 unit malfunctions and/or after  
 changing the Service Pack

## LCD Display

**6**  
 MONTH  
 Dispensing period setting

**EST** TEST mode

**- 180**  
 Remaining dispensing days

**5t03**  
 Number of days since the cycle  
 ended  
 ( and will also display)

Automatic Lock Out mode

**Ch03**  
 Number of days operation has  
 been on hold due to excessive  
 backpressure

**60/125/250** Grease pouch capacity

**t-UP**  
 Maximum runtime has been  
 reached  
 ( and will also display)


Low battery power

LED blinks when battery is low,  
 excessive backpressure exists,  
 or grease level is empty

Operation on hold due to  
 excessive backpressure

Empty grease level

## Mounting Methods

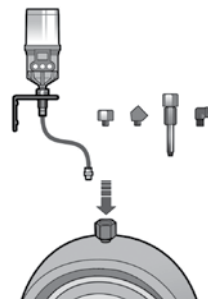


### Single Point Installation

Direct Mount or Remote Installation using Extension Tubing

Direct mount is always preferable. For applications not allowing any direct mounts, remotely mount the unit using appropriate accessories and keep the distance from the lube point as short as possible.

For remote installation using a tube, use a 6mm O.D. (1/4") tubing pre-filled with the same or compatible grease as the grease contained in the unit.

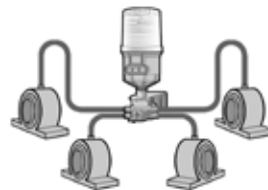

### Multi-Point Installation

Multi-Point Remote Installation using Progressive Divider Block

Ensure the break-off pressure is below the average operating pressure of 30bar(435psi).

#### Warning

- ▶ Do not block any ports on divider block and use a divider block corresponding to the number of ports required for multi-point installation.  
 (Ex. HU-3RS for 3 lube points, HU-5RS for 5 lube points)
- ▶ For more information, please refer to the Multi-Point Remote Installation user manual.  
 (Reference : Website > PRODUCTS > PULSARLUBE INSTALLATION KITS)

## Precautions

**Wiring** : The cable from the vibration detector should not touch the motor directly. Adjust the cable length using a tie band if necessary.

**Regular Inspection** : Keep the position of the vibration detector vertical. When performing periodic maintenance checks, re-run Vibration Detection Mode to ensure vibration is correctly being detected. Adjust position of sensor box and sensitivity as needed.

**Replacement Service Pack after the Recommended Use Time** : If **t-UP** appears on the LCD after 2 years (250ml : 1 year and 6 months) from the installation date, replace the service pack immediately even if the grease remains in the pouch. (Dispensing failures may occur after long periods of time due to grease hardening and/or drops in battery voltage.)

**Shelf life and Warranty Product** Warranty is limited to original defects in material and workmanship and will not cover any collateral damage due to mishandling, abuse and /or any other inappropriate use of this product. Warranty period is 1 year from the date of purchase.

Rev.01

ISO9001/14001

**PULSARLUBE**


**PULSARLUBE**

User Manual

Pulsarlube **Mi**

**Series**


(60ml & 125ml & 250ml)

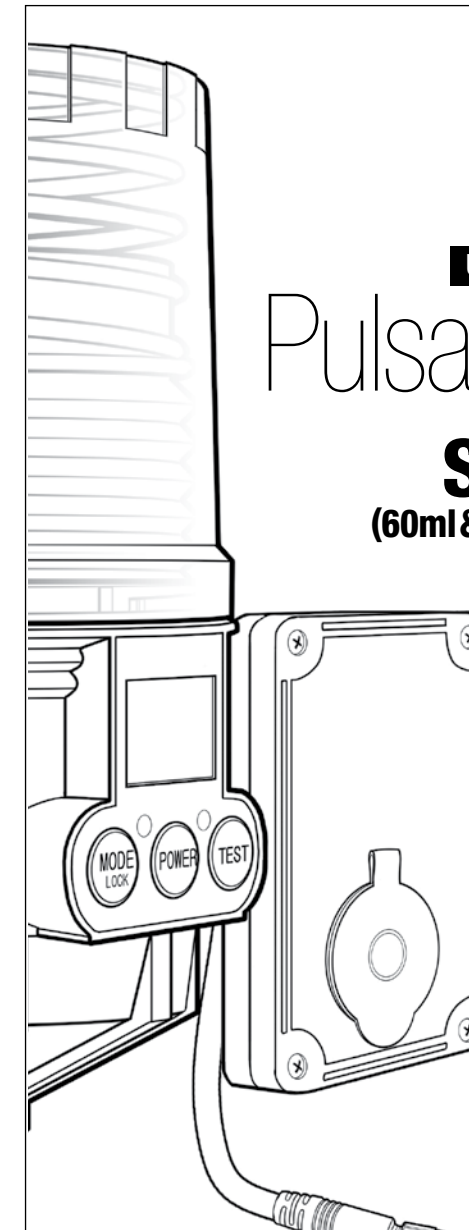


### Pulsarlube USA, Inc.

1480 Howard Street, Elk Grove Village, IL 60007, USA  
 TEL:1-847-593-5300 FAX:1-847-593-5303 www.pulsarlube.com / info@pulsarlube.com


**Product Details**

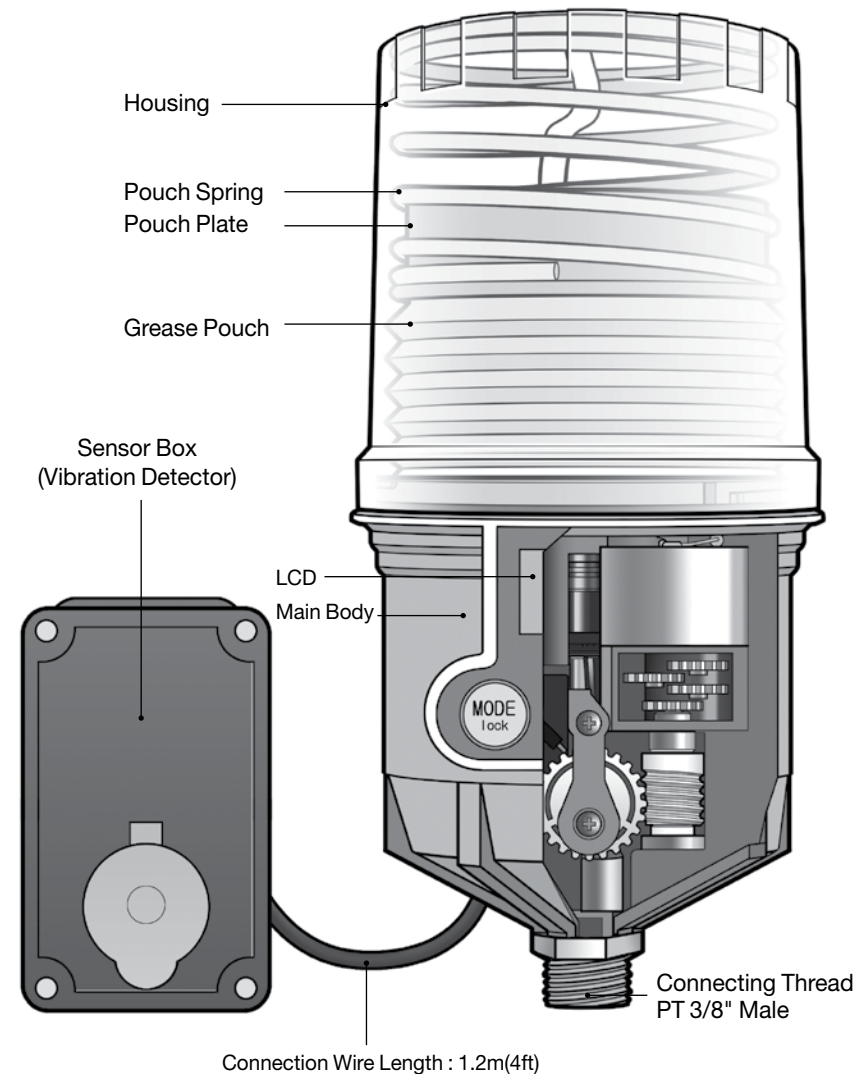


**Installation Guidelines**

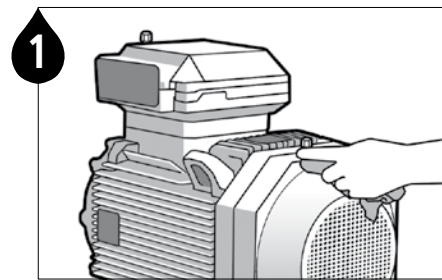


1 Remove contaminants around the lube point.

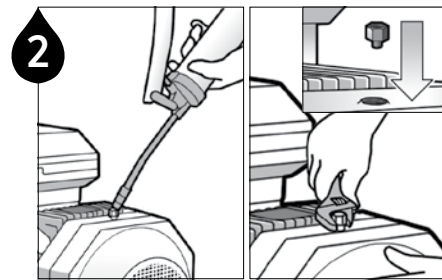


2 Ensure a clear passage by purging the lube point with a manual grease gun. (Use the same or compatible grease.)

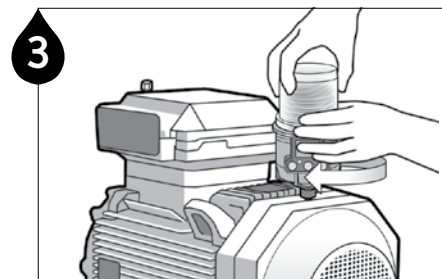


3 Install the lubricator on the lube point.

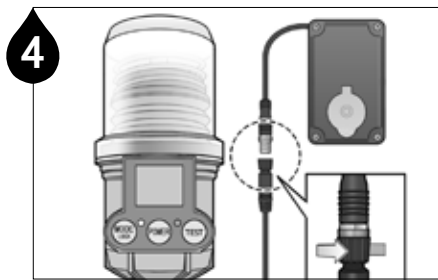


4 Connect the cable of lubricator and the sensor box cable.

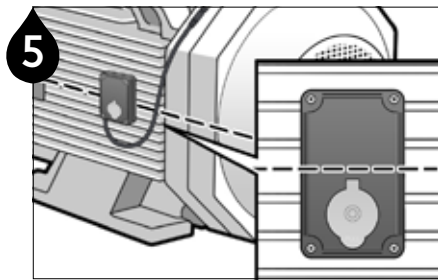


5 Position the sensor box vertically and align it to the shaft of the motor. The cap should be positioned facing downwards.

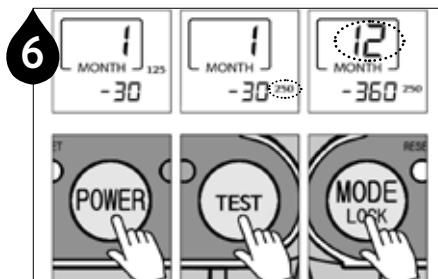


6 Press **POWER** to power on → press **TEST** to select the grease capacity → press **MODE LOCK** to set desired dispensing period.

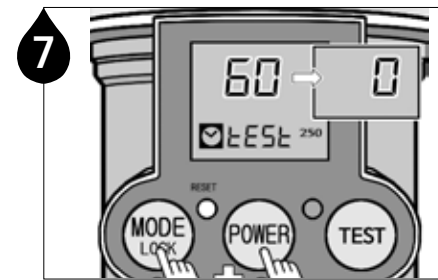

7 Hold **MODE LOCK** and press **TEST** to start Vibration Detection Mode. Refer to the instructions "How To Adjust Sensor Level"

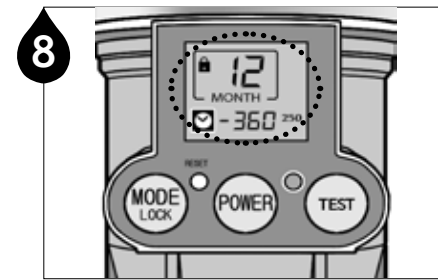

8 After setting the sensor level, set up is completed if you can see **1**) the lock icon **2**) remaining days **3**) set dispensing period and **4**) grease capacity on the LCD.

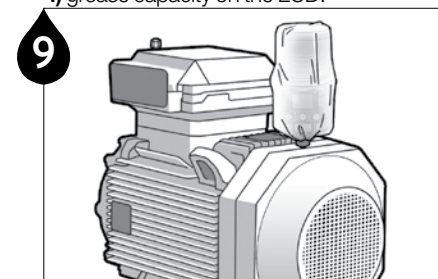

9 Install the dust cover over the lubricator for added protection.

**How To Adjust Sensor Level**

- Open the yellow cap of sensor box.
- Hold **MODE LOCK** and press **TEST** to start Vibration Detection Mode. It will last approximately 60 seconds.
- While the unit is in Vibration Detection Mode, turn the dial counterclockwise to lower sensitivity and turn clockwise to raise sensitivity. **0** is the lowest sensitivity and **10** is the highest sensitivity. (**Factory default setting: 10**)
- To achieve the optimal sensitivity level (the lowest sensitivity at which vibration is being detected), lower the sensitivity by turning the dial counterclockwise until the clock icon disappears. Then, slightly raise sensitivity until the clock icon and red LED reappear.
- If you fail to set the optimal sensitivity level, relocate the sensor box and repeat steps 2-4.

**NOTE** The vibration detector checks for vibration in 1 hour cycle.

**LCD Display During Proper Synchronization**



When the equipment is in operation, the clock icon will be displayed.



When the equipment is not in operation, only the lock icon will be displayed.

**LCD Display During Improper Synchronization**



When the equipment is in operation, the clock icon remains off.




When the equipment is not in operation, all icons are displayed.

**NOTE** If the unit is not operating in synchronization properly, adjust and/or relocate the sensor box. If the problem persists, contact your local distributor or sales rep.


**How To Replace Service Pack**




Check the grease pouch capacity and the service pack items (battery pack, grease pouch, dust cover & label).

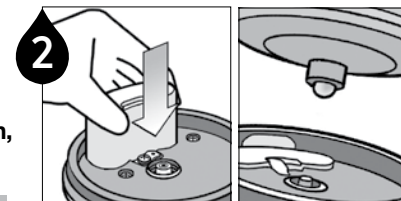

2 Insert the battery pack, secure the battery clip, and purge the grease pouch until grease comes out of the tip.

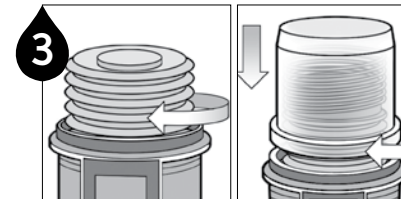

3 Carefully screw the grease pouch in without over-tightening and refit the housing until it clicks.

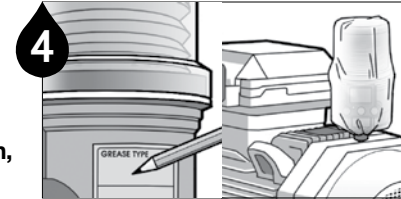

4 Note the installation date and the completion date of lube cycle on the label. Install the dust cover over the lubricator.